


Get to Know Your Gear

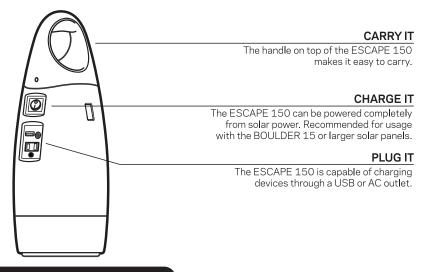

Getting Started

- 1. Be sure to ACTIVATE YOUR WARRANTY at www.GOALZERO.com/warranty
- 2. Charge your ESCAPE 150 through the input port.
- 3. Recharge from GOAL ZERO NOMAD 13.5, NOMAD 27, or USB power source.

How to Use Your Gear

- **1** USB output port
 Accepts any standard USB cable for charging USB devices.
- 2 AC output port
 Use any AC 110V device up to 80 watts.
- 3 Car adapter and 12V output port
 Connect the car adapter (included) to charge 12V devices or plug
 GOAL ZERO lights directly into it.



Comes With

12V car adapter AC wall adapter

Technical Specs	
Usage	
Charges from the following: AC wall charger 12V car adapter BOULDER 30 BOULDER 15 NOMAD 13.5 NOMAD 27 ESCAPE 30	Approx. charge time: 5 hours 5-6 hours 5 hours 10 hours 12 hours 6 hours
Inputs	
Charging port (4.7mm)	15-16V, 3A max (45W)
Outputs	
AC US/EURO port* USB port 12V port (6.0mm)	80W, modified-sine wave US port: 110VAC EURO port: 220VAC 5V, 0.5A (2.5W), buck regulated 11-14V, 10A max (120W)
Internal	
Battery type Battery capacity Battery voltage range Life-span Fuses	Lead-acid (AGM) 150Wh (12V, 14Ah) 11-14.4V hundredsof cycles Output: 20A, standard car fuse Input: 5A, standard car fuse USB: 1A, standard car fuse
General	
Weight Dimensions Warranty Tested and Certified Operating usage temp. Optimal storage temp.	13 lbs (5.9 kg) 5.5x5.5x15.5 in (14x14x39 cm) 12 months FCC and CE 32-104°F (0°-40°C) 70°F (21°C)

*ESCAPE 150 comes preconfigured as either 110VAC or 220VAC